
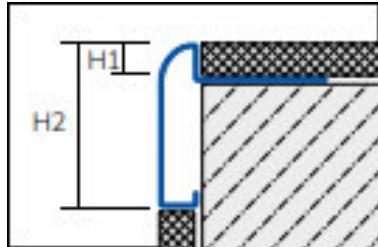


## TECHNICAL DATA SHEET

### DSTAE DP 13,5 mm

<b>Description</b>	Worktop trim
<b>Référence</b>	DSTAE DP 135 / DSTAE DP 135-SF / DSTAE DP 135-T-SF
<b>Material</b>	Aluminium
<b>Surface</b>	Anodised
<b>Couleur</b>	Silver, Silver Brushed, Titanium Brushed
<b>Length cm/inches</b>	250 - 98,4252
<b>High H1 - H2 cm/inches</b>	H1 : 13,5 – 0,53149 H2 : 50 – 1,9685
<b>Weight</b>	0,473 kg/m
<b>Accessories</b>	Internal corner (-XI) and External Corner (-X), Endcap right (-XKR) and left (XKL)
<b>Picture</b>	

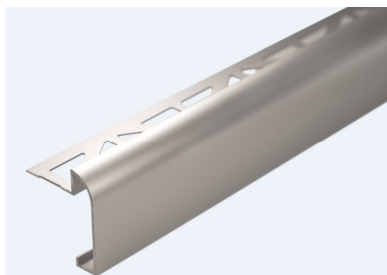

**DSTAE DP 135**



**DSTAE DP 135-SF**



**DSTAE DP 135-T-SF**



## TECHNICAL DATA SHEET

### Anodised aluminium

Anodisation is a special finish that improves the look of aluminium profiles. The anodised surface is susceptible to scratches and may become faded, particularly due to the effect of alkaline building products. Contact with fresh cement can cause surface corrosion. Adhesive and grout should always be removed immediately from all visible surfaces using plenty of water. Once oxidation marks have been allowed to appear, it is practically impossible to remove them. Use only cleaning agents with neutral pH that do not scour. Make sure that good room ventilation is provided, especially when joining in combination with high-gloss anodised profiles, in order to achieve fast curing of the joints. This also reduces the alkaline potential of the cement (lowers the pH), thereby preventing any possible damage to the anodised surface.

### Note

The suitability for use in terms of mechanical and chemical resistance must always be checked in each individual case. When installing and grouting our metal profiles, the adhesive and grouting materials must be removed immediately with clean water and a soft sponge to prevent damage due to corrosion of the profile. Do not use acidic (e.g. cement fog remover) or alkaline cleaning agents in combination with all metal profiles. Clean with clean water and wipe with a dry linen cloth.



DURAL GmbH – Südring 11 – D-56412 Ruppach-Goldhausen Tel. +49 (0) 2602/9261-0 Fax +49 (0) 2602/9261-50 info@dural.com  
DURAL UK Ltd. – Unit 6a Wakefield Business Centre, Denby Dale Road, Wakefield, West Yorkshire, WF2 7AZ Tel. 01924 360110 sales@dural.co.uk  
DURAL USA, Inc. – 711 N Vernell Rd. – Tunnel Hill, GA 30755 Tel. 800.278.1956 Fax 706 519 0395 mail@dural.com

[www.dural.com](http://www.dural.com)