
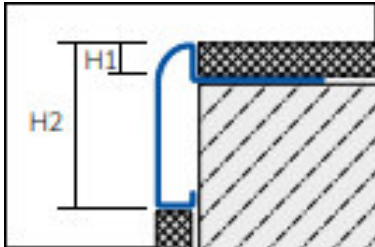


TECHNICAL DATA SHEET

DSTAE DP 9 mm

Description	Worktop trim
Référence	DSTAE DP 90
Material	Aluminium
Surface	Anodised
Coulor	Silver
Length cm/inches	250 - 98,4252
High H1 - H2 cm/inches	H1 : 9 – 0,35433 H2 : 45 – 1,77165
Weight	0,40 kg/m
Accessories	Internal corner (-XI) and External Corner (-X), Endcap right (-XKR) and left (XKL)
Picture	

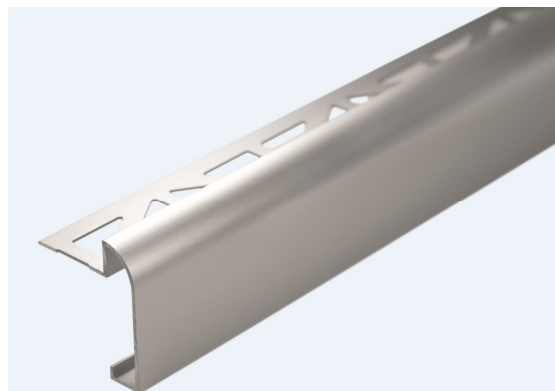

DSTAE DP 90



TECHNICAL DATA SHEET

Anodised aluminium

Anodisation is a special finish that improves the look of aluminium profiles. The anodised surface is susceptible to scratches and may become faded, particularly due to the effect of alkaline building products. Contact with fresh cement can cause surface corrosion. Adhesive and grout should always be removed immediately from all visible surfaces using plenty of water. Once oxidation marks have been allowed to appear, it is practically impossible to remove them. Use only cleaning agents with neutral pH that do not scour. Make sure that good room ventilation is provided, especially when joining in combination with high-gloss anodised profiles, in order to achieve fast curing of the joints. This also reduces the alkaline potential of the cement (lowers the pH), thereby preventing any possible damage to the anodised surface.

Note

The suitability for use in terms of mechanical and chemical resistance must always be checked in each individual case. When installing and grouting our metal profiles, the adhesive and grouting materials must be removed immediately with clean water and a soft sponge to prevent damage due to corrosion of the profile. Do not use acidic (e.g. cement fog remover) or alkaline cleaning agents in combination with all metal profiles. Clean with clean water and wipe with a dry linen cloth.



DURAL GmbH – Südring 11 – D-56412 Ruppach-Goldhausen Tel. +49 (0) 2602/9261-0 Fax +49 (0) 2602/9261-50 info@dural.com
DURAL UK Ltd. – Unit 6a Wakefield Business Centre, Denby Dale Road, Wakefield, West Yorkshire, WF2 7AZ Tel. 01924 360110 sales@dural.co.uk
DURAL USA, Inc. – 711 N Varnell Rd. – Tunnel Hill, GA 30755 Tel. 800.278.1956 Fax 706 519 0395 mail@dural.com

www.dural.com